



Birrus manufactured Slimline and Bullnose stair nosing. This product is Australian-made and manufactured using Australian mined and milled billet - 6000 series alloy for a high quality and corrosion-resistant finish.



Our manufacturing standard lead time is up to 10 working days plus delivery time.



Slimline Stair Nosings



Bullnose Stair Nosings

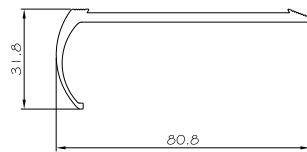

Black



Yellow



Grey



STAIR NOSINGS FEATURES

- Reduce Slip and Trip Hazards
- Prolong the Life of Stair Coverings
- Suitable for Interior and Exterior Stairs
- Slip Tested to Australian Standards
- Designed to fit all Step Types



LEARN MORE



REQUEST A QUOTE



REQUEST A SAMPLE



STAIR NOSINGS

Australian Made - Owned - Manufactured



TECHNICAL SPECIFICATION

- 1-Year warranty
- Bullnose (32mm x 80mm) and slimline (10mm x 78mm) options
- Total height 9.5mm

CONSTRUCTION

- High-quality aluminium construction
- 6000-Series alloy for strength and visual appeal
- Clear-15 micron anodised coating to protect the surface of the aluminium
- Grit tape inserts are manufactured from a 60-grit aluminium oxide formation

ACCREDITATION

- Bullnose products accredited to AS 1428.1-2009
- Slimline products accredited to AS 1428.1-2009 when used in new commercial buildings
- Both Options have been slip resistance tested to AS 4586:2013 Appendix A, achieving a P5 rating
- Grit tape has been luminance reflectance tested to AS 1428.1-2009 Appendix B, paragraph B3 standard:

Grit Tape Colour	Rating When Dry	Rating When Wet
Black	5.3	4.7
Yellow	56.4	56.5
Grey	12.0	11.6

PRODUCT CODES

Product	Code
Slimline Black	BSN10B
Slimline Yellow	BSN10Y
Slimline Grey	BSN10G
Bullnose Black	BSN32B
Bullnose Yellow	BSN32Y
Bullnose Grey	BSN32G



SYSTEM INSTALLATION

Slimline Stair Nosings:

Ensure steps are clean with grit, dirt and debris removed. Either apply a thin bead of polyurethane to the stair or use mechanical fixings in the drilled & counter-sunk holes. Wipe away any glue squeezed out and install grit tape into nosings.

Bullnose Stair Nosings:

Installation to carpet – mark hole locations. Use a sharp knife and cut an 'x' into the carpet, and drill holes. Install grit tape into nosings.

www.birrusmatting.com.au